

Link do produktu: <https://www.strefainternetowa.com/bessto-skrobak-do-szyb-wysuwany-p-406.html>



BESSTO SKROBAK DO SZYB WYSUWANY

Cena	9,99 zł
Numer katalogowy	ALP-18915525516
Kod producenta	b06d6011
Kod EAN	5901383233663

Opis produktu

SKROBAK do szyb okien płyty indukcyjnej ceramicznej kuchenki uniwersalny

□□□□□

Skrobak do płyty indukcyjnej ceramicznej szyb

Ten skrobak to niezastąpione narzędzie do utrzymywania porządku w kuchni i nie tylko. Z **solidnego tworzywa sztucznego** i **niezawodnej stali**, narzędzie to skutecznie usuwa zabrudzenia **bez ryzyka zarysowania** delikatnych powierzchni.

□ Opis techniczny

- **Materiał:** tworzywo sztuczne, stal nierdzewna
- **Rozmiar:** 4 x 10 cm
- **Główne zastosowanie:** usuwanie kleju, zabrudzeń z płyt kuchennych, wanny, okien, i więcej

□ Bezpieczne dla powierzchni ostrze

Ostrze zaprojektowane tak, by skutecznie radzić sobie z trudnymi zabrudzeniami, jednocześnie będąc bezpiecznym dla powierzchni płyt ceramicznych, kafelków, szyb i luster.

□ Wszechstronność użytkowania

Skrobak jest nie tylko przydatny w kuchni, ale też w łazience do czyszczenia wanny, a także przy czyszczeniu okien czy podczas remontów do usuwania farb i etykiet.

□ Ergonomiczny uchwyt

Uchwyt zaprojektowany z myślą o wygodzie użytkowania, zapewnia pewny chwyt i komfort podczas skrobania.

☐ Zalety

- Uniwersalność w zastosowaniu
- Nie rysuje czyszczonych powierzchni
- Ergonomiczny kształt uchwytu

☐ Zestaw zawiera

- 1 x skrobak do płyt ceramicznych

Parametry produktu

- **Stan:** Nowy
- **Kod producenta:** b06d6011
- **Marka:** bez marki
- **Rodzaj:** skrobak
- **Waga produktu z opakowaniem jednostkowym:** 0.041
- **Kod taryfy celnej:** 82055980
- **EAN (GTIN):** 5901383233663

Informacje o bezpieczeństwie

Safety warning list for small kitchen appliances based on the requirements of General Product Safety Regulation (EU) 2023/988 (GPSR) General warnings: * Before use, make sure that the appliance is suitable for the intended use. Use only for the purpose described in the instruction manual. * Check that the supply voltage is consistent with the voltage specified on the device. Incorrect voltage can cause damage to the device or fire. * Regularly check the status of the power cable and plug. A damaged cable or plug can pose a risk of electric shock. * Do not use the device if it is damaged or not working properly. * Keep your device clean to prevent the growth of bacteria and mold. * Do not repair the device yourself. Please contact an authorized service provider for repair or maintenance. * Watch out for children near a working device. Children should not play with or operate the device without adult supervision. * Do not use the device outdoors unless intended for this purpose. Weather conditions can damage the device or cause danger. * Store your device in a dry and safe place, away from heat and moisture sources. * Disconnect the device from power before cleaning, maintenance, or when not in use. * Do not immerse the device in water or other liquids unless expressly permitted in the instruction manual. * Do not use accessories other than those recommended by the manufacturer, as they may damage your device or pose a threat. * Make sure all parts of the device are properly fastened before starting it. * Do not overload the device. Follow the recommended usage limits. * Avoid contact with hot surfaces of the device during its operation. * Use protective gloves or cloths to protect your hands from burns. * Do not block the ventilation holes of the device to prevent overheating. * Keep a safe distance from flammable materials when using the device. * Regularly check the temperature of the device to prevent overheating. * If you notice smoke, fire or unusual smell, immediately disconnect the device from the power supply. * Do not touch the device with wet hands. * Do not use damaged or malfunctioning electrical outlets. * Make sure that the power cable is not placed in a place where you can trip over it or damage it. * Don't let the power cable hang from the edge of your table or countertop where your child could pull it. * Do not use the device near water or other liquids that may get inside. * When using the device, avoid wearing loose clothing or jewelry that may be pulled inside. * Do not leave your device running unattended. * Do not attempt to modify the device in any way. * Follow hygiene rules when preparing food. * Clean your device regularly according to the user manual. * Make sure the device is stably placed on the work surface to prevent it from tipping over. * Do not use the device in areas with limited space or poor ventilation. * When replacing accessories, make sure the device is turned off and disconnected from power. * Do not allow pets to come into contact with a working device. * Make sure your device is completely cooled before hiding it for storage. * Avoid the use of aggressive chemicals when cleaning the device. * Do not expose the device to direct sunlight or extreme temperatures. * If the device has an automatic shutdown function, make sure that it is working properly. * Before discarding the unit, make sure it has been properly disassembled and disposed of in accordance with local regulations.

Producent — dane kontaktowe

PLECUOM
DWORCOWA 5
58-130
ŻARÓW
PL
biuro@pleucom.com
696113253

