

Link do produktu: <https://www.strefainternetowa.com/fiskars-ostrzalka-osełka-do-noży-standard-p-3382.html>

FISKARS OSTRZAŁKA OSEŁKA DO NOŻY STANDARD



Cena	45,00 zł
Numer katalogowy	ALP-15317864962
Kod producenta	1065598
Kod EAN	6424002015772

Opis produktu

FISKARS

FISKARS OSTRZAŁKA STANDARD DO NOŻY ASPEKT / ROLL SHARP

Ostrzałka firmy Fiskars idealnie nadaje się do ostrzenia siekier, jest łatwa w użyciu i skuteczna. Stosując ostrzałkę skutecznie naostrzymy siekiery i noże. Regularne wykorzystywanie ostrzałki pozwala zachować idealne parametry narzędzi tnących oraz ich sprawność, dzięki czemu praca będzie lekka i przyjemna.

Parametry

Waga: 64g

Długość: 160 mm

Kolor: czarny

Parametry produktu

- **Stan:** Nowy
- **EAN (GTIN):** 6424002015772
- **Kod producenta:** 1065598
- **Marka:** Fiskars
- **Rodzaj:** ceramiczna
- **Waga produktu z opakowaniem jednostkowym:** 0.06

Informacje o bezpieczeństwie

List of safety warnings for knives and kitchen shears based on the requirements of Regulation (EU) 2023/988 on general product safety (GPSR): 1. Risk of injury: Take special care when using knives and kitchen shears. The blades are sharp and can cause serious cuts. 2. Storage: Keep knives and kitchen shears in a safe place, out of reach of children and unauthorized persons. Use knife blocks, blade covers or special drawers. 3. Usage: Use kitchen knives and shears only for their intended purpose. Avoid excessive pressure and abnormal movements that can lead to loss of control and cuts. 4. Caution when cutting: When cutting, place the cutting board on a stable surface to prevent it from moving. Keep your fingers away from the blade. 5. Cleaning: Clean knives and kitchen shears carefully using protective gloves. Avoid direct contact with the blade. Do

not put knives in the dishwasher, as high temperature and detergents can damage the blade and handle. 6. Sharpening: Sharpen knives regularly to ensure they work properly and reduce the risk of cuts caused by blunt tools. Sharpen knives using appropriate sharpeners, with caution and according to the instructions. 7. Repair: Do not use damaged knives and kitchen shears. Return them for repair or replace them with new ones. 8. Disposal: Safely dispose of worn or damaged kitchen knives and shears to prevent accidental cuts. Protect the blade from being thrown away. 9. Carrying: When moving knives and kitchen shears, use blade covers or special cases to avoid accidental cuts.

Producent — dane kontaktowe

Fiskars Polska Sp. z o.o.
ul. Annopol 4A
03-236
Warszawa
PL
biuro@fiskars.pl