

Link do produktu: <https://www.strefainternetowa.com/schmith-noz-kuchenny-die-kuche-32cm-p-3272.html>

SCHMITH NÓŻ KUCHENNY DIE KUCHE 32CM



Cena	58,99 zł
Numer katalogowy	ALP-16011144153
Kod producenta	SN2104011
Kod EAN	5902004743967

Opis produktu

Nóż szefa kuchni Schmith die Küche 32cm Schmith

- **Producent:** Schmith

NÓŻ SZEFA KUCHNI SCHMITH DIE KÜCHE 32CM

Ostrze noża wykonane jest ze stali nierdzewnej 5Cr15 a rękojeść z drewna Pakka. Nie zaleca się myć w zmywarce.

PRODUKT WYPRODUKOWANY ZOSTAŁ PRZEZ MARKĘ SCHMITH

Parametry produktu

- **Stan:** Nowy
- **Marka:** Schmith
- **EAN (GTIN):** 5902004743967
- **Kod producenta:** SN2104011
- **Długość ostrza:** 32
- **Przeznaczenie:** szefa kuchni
- **Materiał uchwytu:** drewno
- **Materiał ostrza:** ze stali

Informacje o bezpieczeństwie

List of safety warnings for knives and kitchen shears based on the requirements of Regulation (EU) 2023/988 on general product safety (GPSR): 1. Risk of injury: Take special care when using knives and kitchen shears. The blades are sharp and can cause serious cuts. 2. Storage: Keep knives and kitchen shears in a safe place, out of reach of children and unauthorized persons. Use knife blocks, blade covers or special drawers. 3. Usage: Use kitchen knives and shears only for their intended purpose. Avoid excessive pressure and abnormal movements that can lead to loss of control and cuts. 4. Caution when cutting: When cutting, place the cutting board on a stable surface to prevent it from moving. Keep your fingers away from the blade. 5. Cleaning: Clean knives and kitchen shears carefully using protective gloves. Avoid direct contact with the blade. Do not put knives in the dishwasher, as high temperature and detergents can damage the blade and handle. 6. Sharpening: Sharpen knives regularly to ensure they work properly and reduce the risk of cuts caused by blunt tools. Sharpen knives using appropriate sharpeners, with caution and according to the instructions. 7. Repair: Do not use damaged knives and kitchen

shears. Return them for repair or replace them with new ones. 8. Disposal: Safely dispose of worn or damaged kitchen knives and shears to prevent accidental cuts. Protect the blade from being thrown away. 9. Carrying: When moving knives and kitchen shears, use blade covers or special cases to avoid accidental cuts.

Producent — dane kontaktowe

SCHMITH POLSKA S.A
KULICE UL.SZKOLNA 4
83-130
PELPLIN
PL
kontakt@schmith.pl
696113253